

TÔNker — CosmoSonic Stomp

Owner's Manual

Thanks for choosing TÔNker. Please read this document to get the best use and joy of an unique, versatile, overdrive/booster/tônker effect.

External controls:

Mid:

3 x Mid modes. Start in the middle position (minimum mid).

Gain:

3 x Gain modes. Start in the middle position (maximum gain).

Treble:

High frequencies control. Start around 12 o'clock. Clockwise gives more.

Tônk:

Character/Drive control. Start at 10-12 o'clock. Clockwise gives more overdrive while counterclockwise gives a more "Tônky" sound.

Volume:

Output level. Start at 10-12 o'clock. Clockwise gives more.

Bass:

Bass control. Start at 12 o'clock. Clockwise gives more bass.

OUT:

Connect your amplifier here.

5-18V DC

External DC adapter. Standard 2,1 mm barrel jack, 5-18 volt regulated DC with center-pin negative (BOSS standard).

The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended.



IN:

Connect your instrument here.

GIMME:

ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED.

* The push switch in TÔNker is not as stiff as the ones you might be used to. If you're a hippie who like to play barefoot this can be a good thing.

TÔNker tips & tricks:

It could take some time to get a grip about all possibilities in this pedal, as it's like nothing else. We encourage you to try several different combinations of the outboard control settings as each will impart its own unique character on your tone. We recommend to place TÔNker first in your chain of pedals as this way it can interact with your guitar's volume control in more interesting ways. Also connect an overdrive pedal—The Fetto's are recommended—after TÔNker and you will most likely experience more dimensions of *Tone!*

Every pedal is 100% handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal controls, remember the inside parts are not meant to be adjusted regularly by the user—because of functional/warranty reasons (noted inside). More information about TÔNker, and collaborating products, is available at www.himmelstrutz.com.

- Do not start with the "Treble" control set at max as this might be very bright for some rigs/occations.
- Even though the power consumption is low (2-3 mA) the battery needs to be replaced when the LED gets weak or if the tone changes in a negative way. To change the battery, unscrew the four screws on the bottom plate, bring out the 9 volt battery (6LR61) and replace it. Then attach the bottom plate with the four screws. Never use TÔNker without the bottom plate!
- If you play loud, always use ear protection. It's easy to forget but please do your best to protect your ears!
- Unplug the input cord when not using the pedal—to save the battery (and environment).
- Don't forget to have fun, why not with ear protection.

Good luck.

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden

www.himmelstrutz.com

Doc: 6403015_om_001-. (#001-)