

FETTO C-Luxe — Great White Distortion

Owner's Manual

Thanks for choosing FETTO C-Luxe. Please read this document to get the best use and joy of this versatile guitar overdrive/distortion effect.

External controls:

Mid:

3 x Mid modes. Start in the middle position (minimum mid).

Volume:

Output level. Start at 10-12 o'clock. Clockwise gives more.

Core:

More or less core/attack/headroom. Clockwise gives less compression/distortion and a bigger, fuller sound.

OUT:

Connect your amplifier here.

Tone/Treble:

Tone control. Start around 12 o'clock. Clockwise gives more higher frequencies.

Presence:

3 x Presence modes. Start in the middle position (minimum presence).

Drive:

Drive/distortion control. Start at 10-12 o'clock. Clockwise gives more and more is fun.

9V DC

External DC adapter. Standard 2,1 mm barrel jack, 9 volt regulated DC with center-pin negative. (BOSS standard). **NEVER power FETTO-C-Luxe with more than 9 V DC!**

The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended.



IN:

Connect your instrument here.

GIMME:

ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED.

*The push switch in FETTO C-Luxe is not as stiff as the ones you might be used to. Now you can play safe without damaging your high heels.

FETTO C-Luxe tips & tricks:

It might take some time to get a grip about all possibilities in FETTO C-Luxe. We encourage you to try several different combinations of the outboard control setting as each will impart its own unique character on your tone. Also, try to adjust the volume control of your guitar and you will see how flexible, responsive, musical and 'real' this tool is. Our wish is that you'll like the FETTO C-Luxe experience!

Every pedal is 100% handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal trimmers and jumpers inside, remember these parts are **not** meant to be adjusted by the user—because of functional/warranty reasons. More information about FETTO C-Luxe, and collaborating products, is available at www.himmelstrutz.com.

- Even though the power consumption is low (3-4 mA) the battery needs to be replaced when the LED's gets weak or if the tone changes or get quiet (even when the LED is ON). To change the battery, unscrew the four screws on the bottom plate, bring out the old 9 volt battery (6LR61) and replace it with a new. Then attach the bottom plate with the four screws. Never use FETTO C-Luxe without the bottom plate!
- If you play loud, always use ear protection. It's easy to forget, but in the long run not a good idea!
- Unplug the input cord when not using the pedal—if powered by a battery—to save the battery (and environment).
- Don't forget to have fun, why not with ear protection and a Bloody Mary.

Good luck!

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden