

# Fetto Nord+ — Great Wide Distortion + Boost

## Owner's Manual

Thanks for choosing Fetto Nord+. Please read this document to get the best use and joy of this versatile Great Wide Distortion + Boost effect.

### External controls:

#### Volume:

Output level. Start at 10-12 o'clock. Clockwise gives more

#### More:

Boost level (+20dB max). Start at 10-12 o'clock. Clockwise gives more. Counter clockwise gives less

#### OUT:

Connect your amplifier here

#### GIMME:

Distortion ON/OFF push switch\*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED

#### Mid:

3 x Mid modes. Start in the middle position (minimum mid)

#### Treble:

Treble control. Start around 12 o'clock. Clockwise gives more 'treble'

#### Pres:

3 way Presence switch. Start in the middle position (minimum presence)

#### Drive:

Drive/distortion control. Start at 10-12 o'clock. Clockwise gives more

#### 5-18V DC:

External DC adapter. Standard 2,1 mm barrel jack, 5-18 volt regulated DC with center-pin negative (BOSS standard)

*The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended*

#### IN:

Connect your instrument here

#### MORE:

Boost ON/OFF push switch\*. True mechanical (not electronic) bypass. ON is indicated with a bright orange LED

NB: MORE can be activated regardless of the GIMME switch

\* The push switches in Fetto Nord+ are not as stiff as the ones you might be used to. Now you can play barefoot without hurting your little toes



### Fetto Nord+ tips & tricks:

It might take some time to get a grip about all possibilities in this pedal. We encourage you to try several different combinations of the outboard control setting as each will impart its own unique character on your tone. Also, try to adjust the volume control of your guitar and you will see how flexible, responsive and 'real' Fetto Nord+ is. Our wish is that you'll get a pleasant Fetto Nord+ experience!

Every pedal is 100% handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal controls, remember these parts are *not* meant to be adjusted regularly by the user—because of functional/warranty reasons. More information about Fetto Nord+, and collaborating products, is available at [www.himmelstrutz.com](http://www.himmelstrutz.com).

- Even though the power consumption is low (3-4 mA) the battery needs to be replaced when the LED's gets weak or if the tone changes. To change the battery, unscrew the four screws on the bottom plate, bring out the old 9 volt battery (6LR61) and replace it with a new. Then attach the bottom plate with the four screws. Never use Fetto Nord+ without the bottom plate!
- If you play loud, always use ear protection. It's easy to forget, but not a splendid idea in the long run.
- Unplug the input cord when not using the pedal—if powered by a battery—to save the battery (and environment).
- Don't forget to have fun and make some music, with ear protection if needed.

Good luck!

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden