

FETTO Nord 70 Plus—Great Old Distortion + Boost

Owner's Manual

Thank you for choosing FETTO Nord 70+. Please read this document to get the best use and joy of this versatile Great Old Distortion and Boost effect.

External controls:

Volume:

Output level. Start at 10-12 o'clock. Clockwise gives more.

More:

Boost level (+20dB max). Start at 10-12 o'clock. Clockwise gives more.

Gain:

2 way Gain switch. Left= high gain Right=low gain

Treble:

Treble/Tone control. Start around 11 o'clock. Clockwise gives more treble.

Pres:

3 way Presence switch. Start in the middle position (minimum presence/treble)

Drive:

Drive/distortion control. Start at 10-12 o'clock. Clockwise gives more and more is fun.

5-18V DC

External DC adapter. Standard 2,1 mm barrel jack, 5-18 volt regulated DC with center-pin negative (BOSS standard).

The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended.



OUT:

Connect your amplifier here.

IN:

Connect your instrument here.

GIMME:

Distortion ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED.

MORE:

Boost ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a bright orange LED.

NB: MORE can be activated regardless of the GIMME switch.

*The push switches in FETTO Nord 70+ is not as stiff as the ones you're probably used to. Now you can play barefoot without any pain.

FETTO Nord 70+ tips & tricks:

It could take some time to get a grip about all possibilities in this pedal. We encourage you to try several different combinations of the outboard control settings as each will impart its own unique character on your tone. Also, try to adjust the volume control of your guitar and you will see how flexible, responsive and 'real' FETTO Nord 70+ is. Our wish is that you will have a good FETTO Nord 70+ experience.

Every pedal is 100% handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal trimmers and jumpers, remember these parts are *not* meant to be adjusted regularly by the user—because of functional/warranty reasons. More information about FETTO Nord 70+, and collaborating products, is available at www.himmelstrutz.com.

- Even though the power consumption is low (3-4 mA) the battery needs to be replaced when the LED's gets weak or if the tone changes. To change the battery, unscrew the four screws on the bottom plate, bring out the old 9 volt battery (6LR61) and replace it with a new. Then attach the bottom plate with the four screws. Never use FETTO Nord 70+ without the bottom plate!
- If you play loud, use ear protection. It's easy to forget but please do your best to protect your ears!
- Unplug the input cord when not using the pedal—to save the battery (and environment).
- Don't forget to have fun, with ear protection if needed.

Good luck.

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden

www.himmelstrutz.com

Doc: 6403020_FN70_plus_om_026-. (#026-)