

Himmelstrutz GNOME amp Internal Settings




**Dirt Core
Jumper/Switch**
ON/OFF
(ON)*

**Dirt Level
Trimmer**
0-100%
(50-70%)*

**Dirt Bass
Trimmer**
0-100%
(50-70%)*

*** =Default Setting**

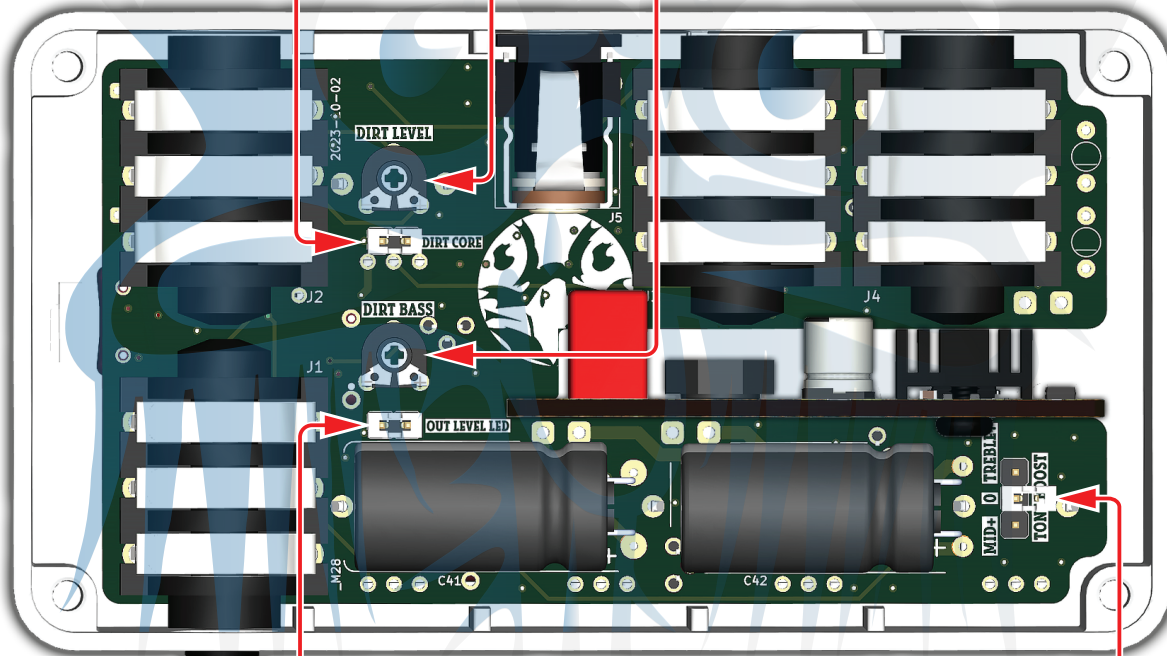

**OUT Level LED
Jumper/Switch**
ON/OFF
(ON)*

**Tone Boost
Jumper/Switch**
Mid+/OFF/Treble+
(OFF)*